

How to Update EZCast Firmware

This instruction shows how to manually update firmware of your EZWire dongle product through PC tool instead of updating it Over-the-Air. Due to the design complexity, you will need some tools to do it.

1. Micro USB to USB Type-A cable: This will help you to connect the dongle with PC.
2. A small tool like a clamp or tweezers helps you to press reset button so that you can enter our firmware download mode.
3. A Windows 7 or above OS Windows PC.




After you have prepared all tools you need, you can start to update FW. Here are the procedures as below:


Step 1: Download EZCast Repair Tool to your Windows PC (at the bottom of this page).


Uncompressed the downloaded file and turn on ADFU_Driver file.

Double click the “Setup_Driver” file to install the driver.

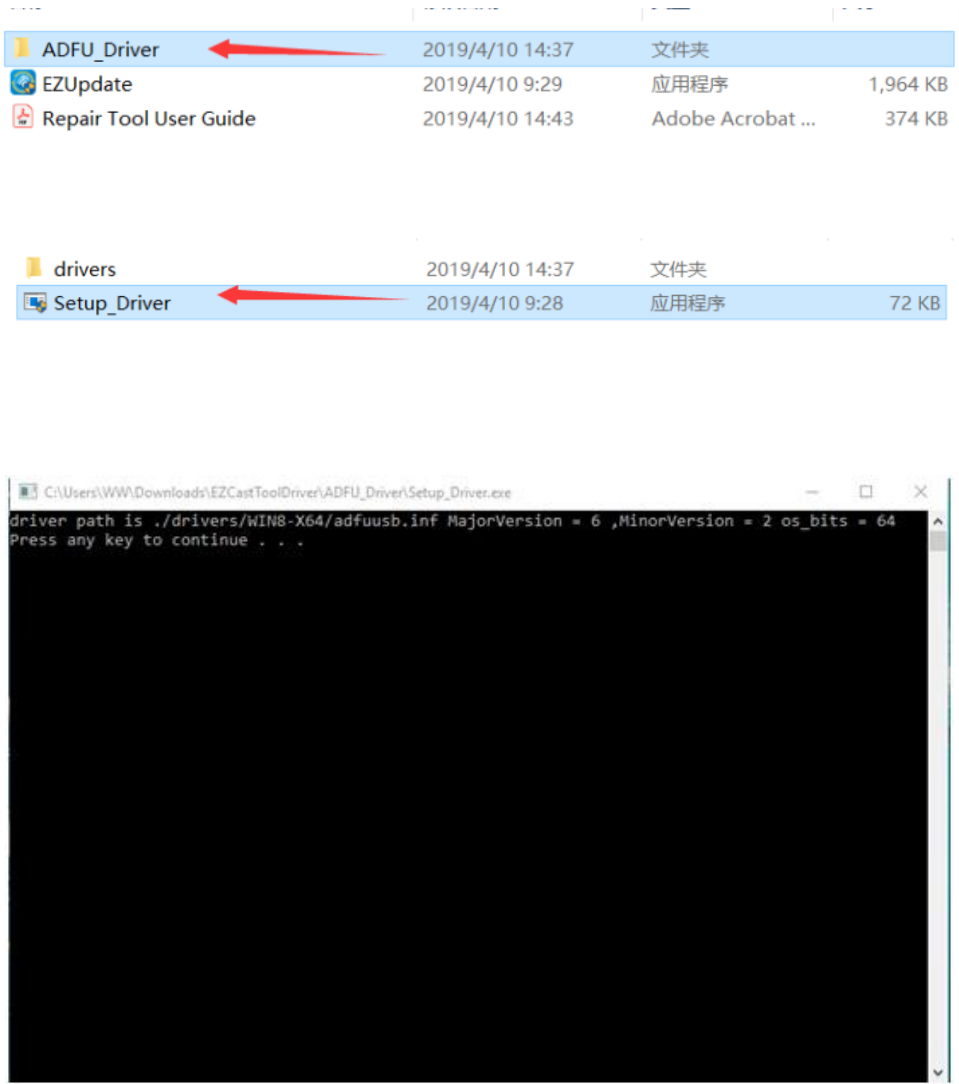

After installing the driver, please double click the “EZCastUpdate” file.

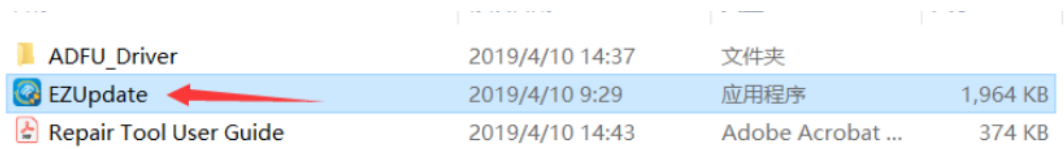

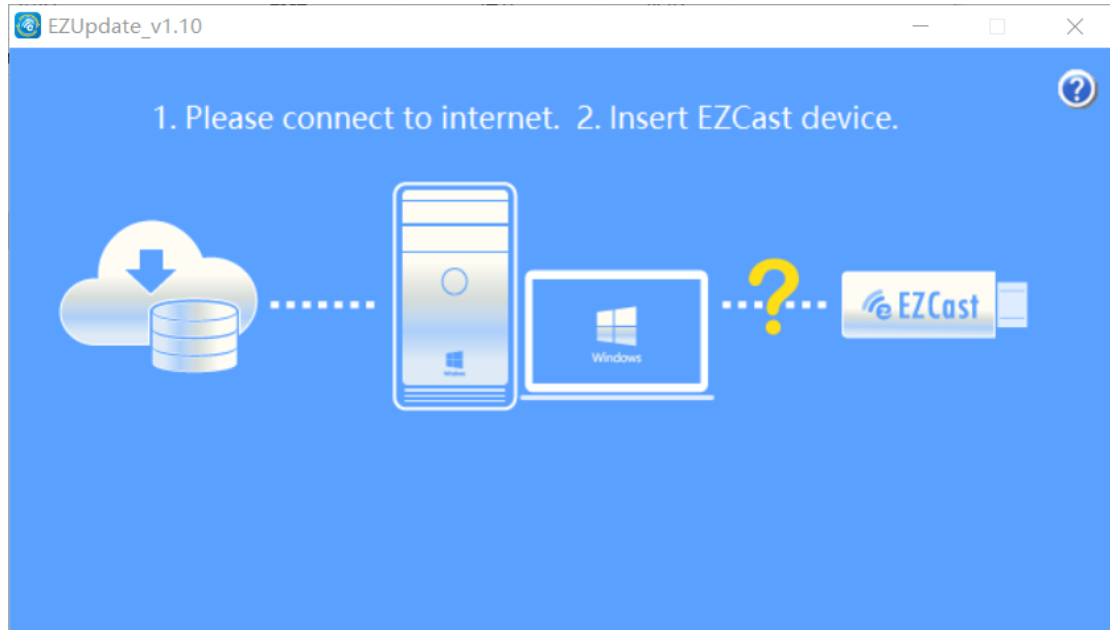

Step 2. Enter download mode:

Connect Micro USB cable with EZCast Wire first, and please use tweezers to hold down reset button, and don't let go the tweezers, then plug USB A to PC.





When the USB is connected to PC, the New Hardware Wizard will ask you to install driver, now you can let go the tweezers


**the pop-up message will not be shown correctly if you didn't enter download mode successfully.*

Step 3. Update firmware

Click "Check Version", the tool will start to compare the FW version between dongle and our cloud server. If the tool shows "No Version Info", you can ignore it and keep upgrading the FW.

**please be noted your PC must connect to internet first.*

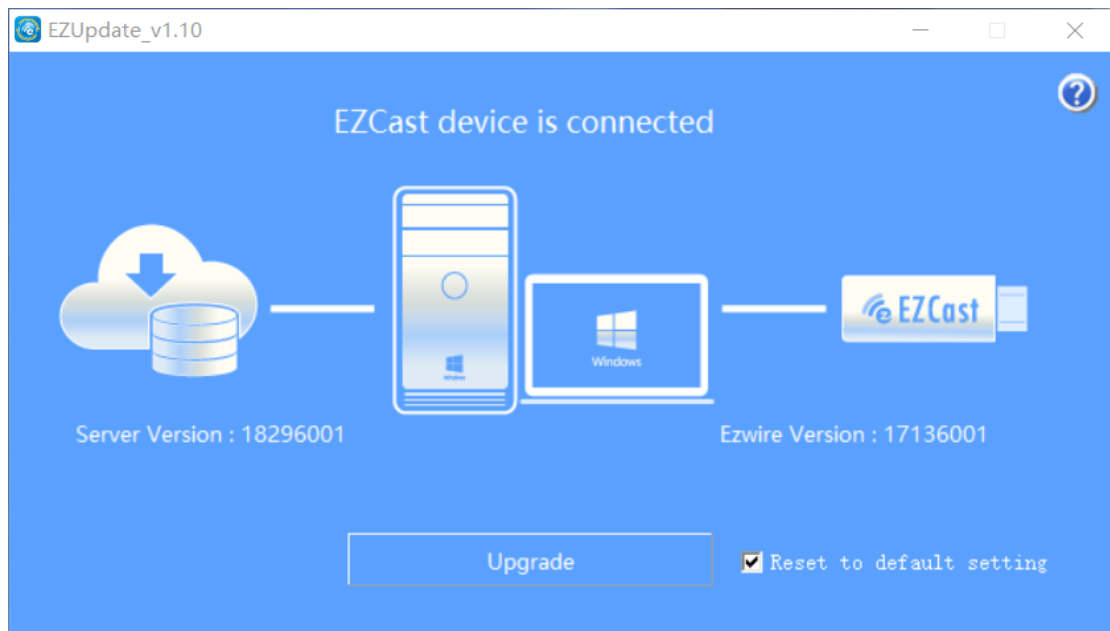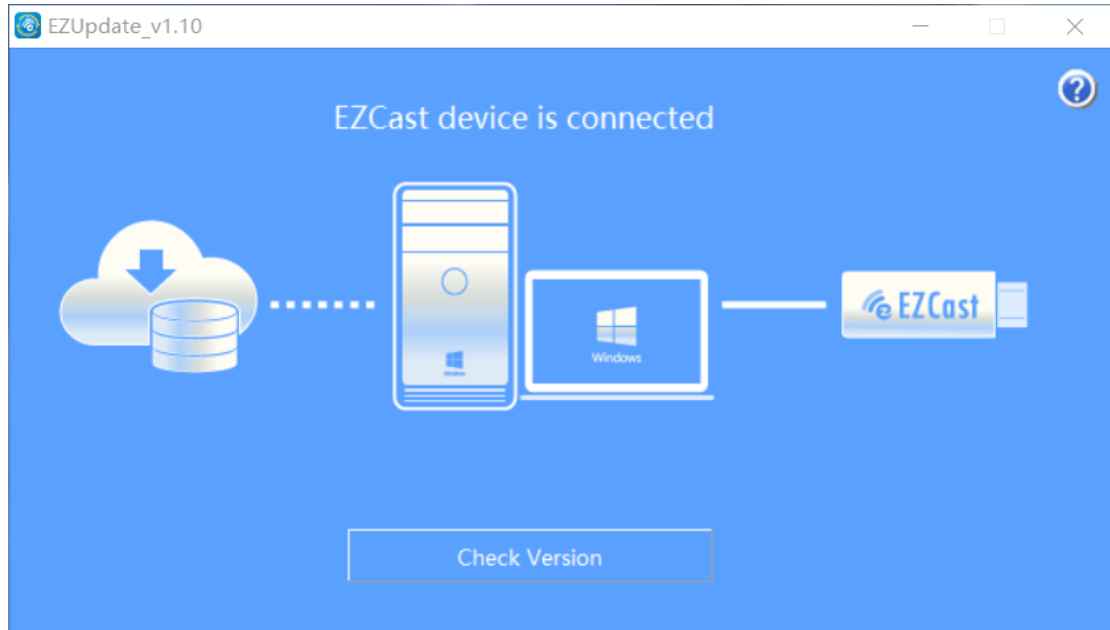

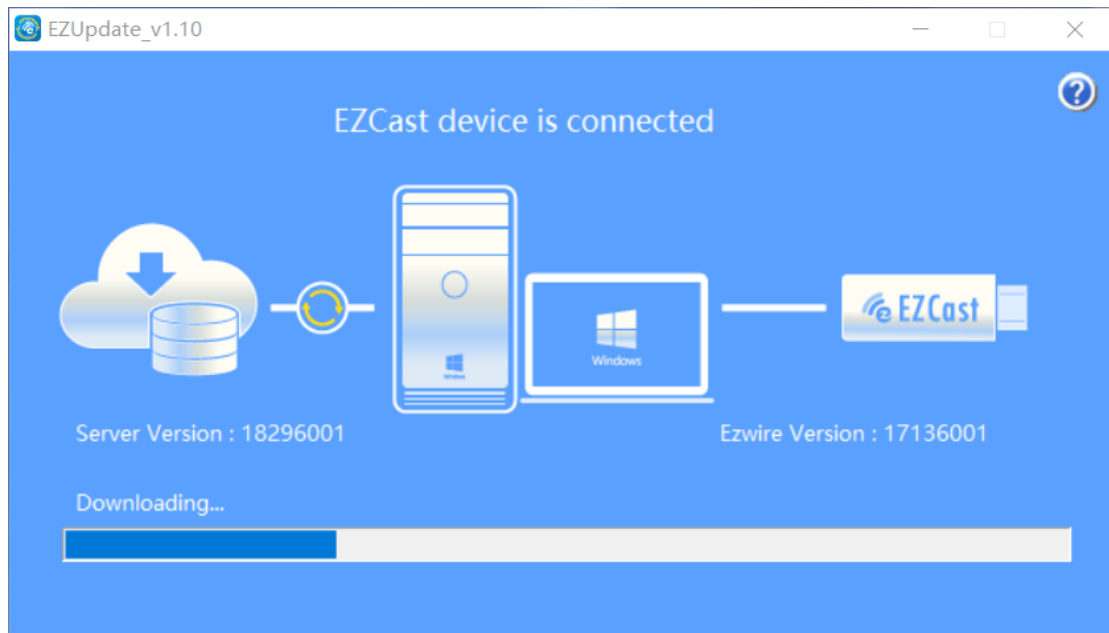

The FW is successfully updated when you see the following message.

After the update is done, please unplug the dongle and connect to TV to enjoy latest FW version!

