

How to update firmware through PC

You will learn how to update MagicLink's firmware with our PC tools through the following methods.

The tools you may need:





1. A paper pin: To push the reset button.
2. A Windows PC, running Win 7 or above.

Please follow the methods to update FW.


Step 1: Download EZCast Repair Tool to your Windows PC (at the bottom of this page).


Uncompressed the downloaded file and turn on ADFU_Driver file.

Double click the “Setup_Driver” file to install the driver.

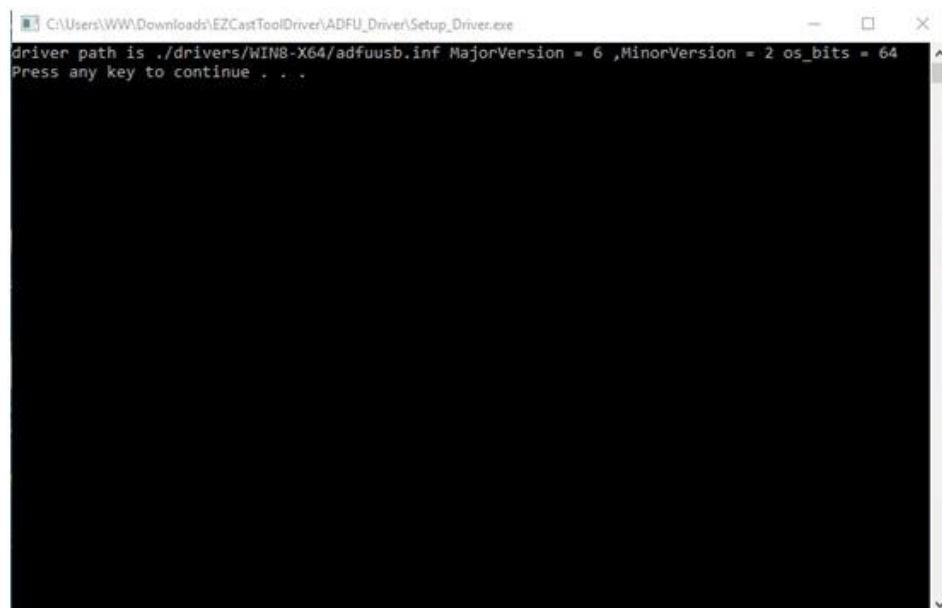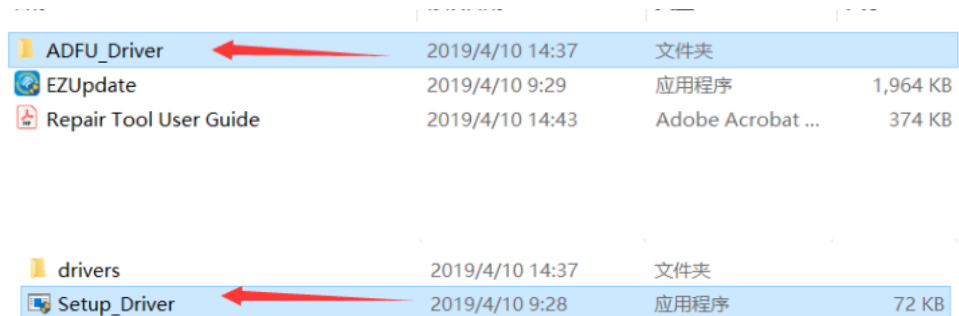

 After installing the driver, please double click the “EZCastUpdate” file.

ADFU_Driver	2019/4/10 14:37	文件夹	
EZUpdate 	2019/4/10 9:29	应用程序	1,964 KB
Repair Tool User Guide	2019/4/10 14:43	Adobe Acrobat ...	374 KB

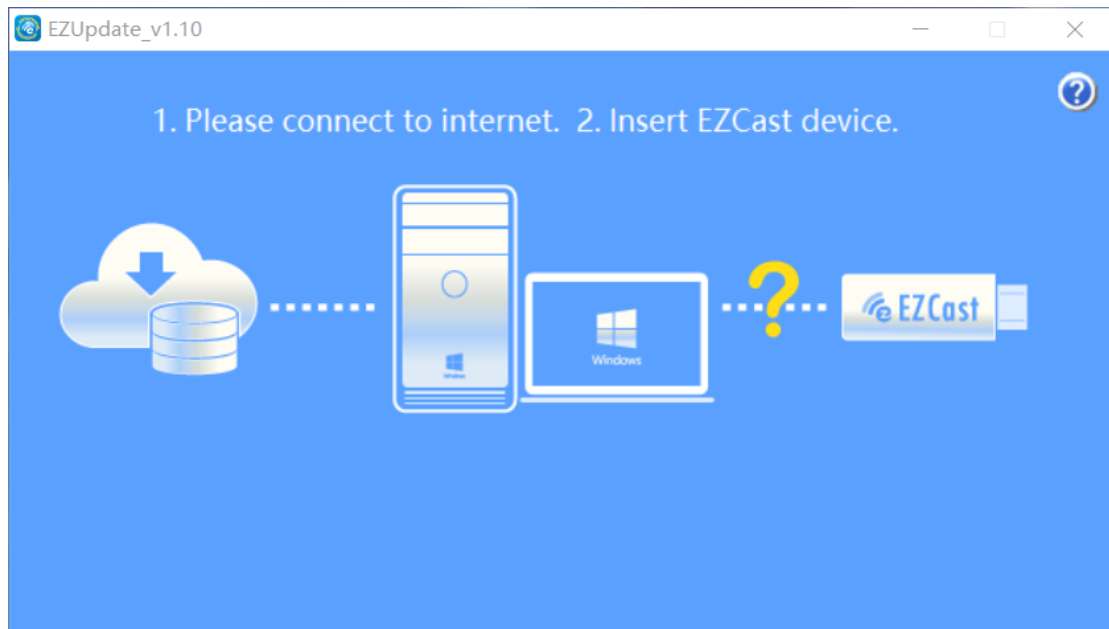

*** If you didn't install driver correctly, please repeat step 1~2. After installing the driver.**

Step 2. Enter update mode


Use a paper pin to push and hold the reset button and plug the USB cable to PC at the same time. You may need to wait for 3~5 seconds for PC to recognize the USB device. (Note: The Reset button is located in the small hole of MagicLink, you may feel a gentle click when you press it).



*** The reset button location**





*** PC displays the following screen to indicate the device is found and connected to the PC, and then you can release the reset button, click “Check Version” for next step.**

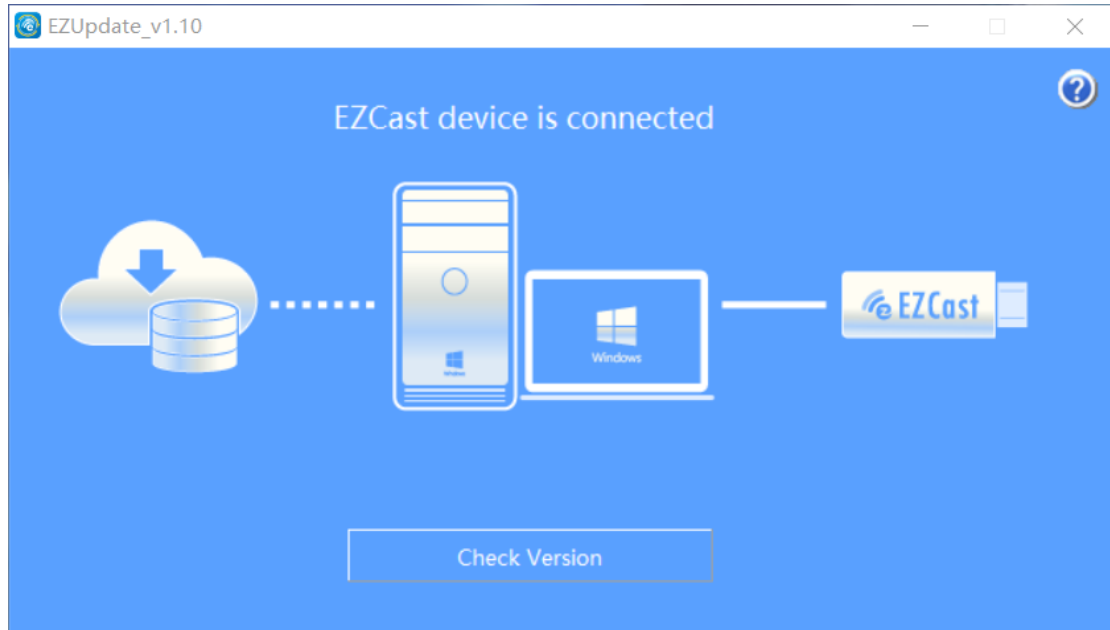

Step 3. Update firmware

Click “Upgrade”, you will see following figure to show FW Download progress.

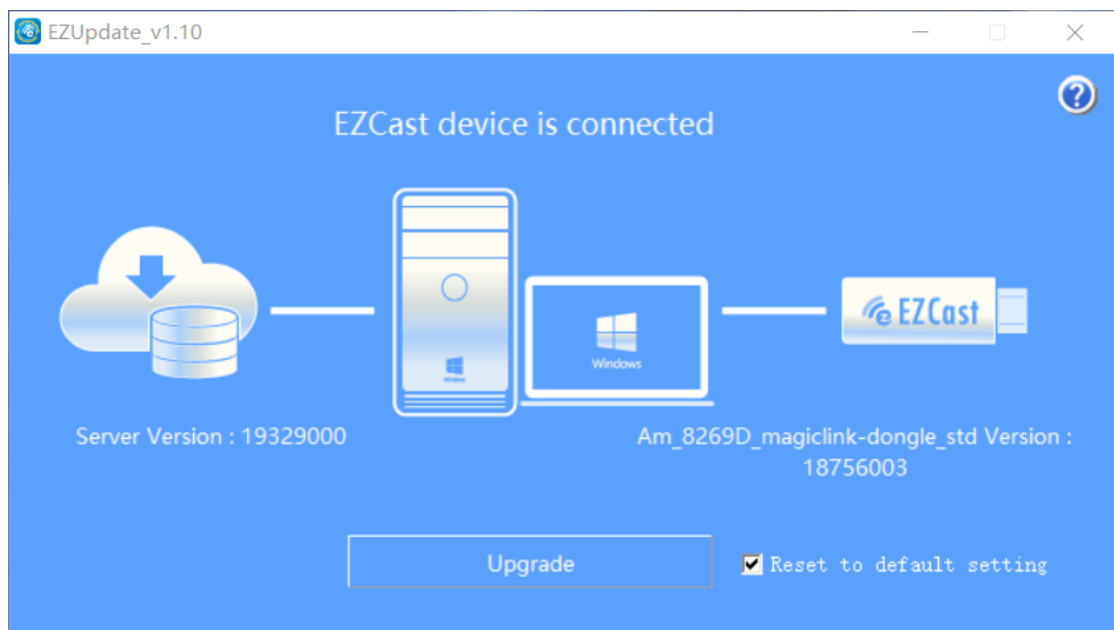

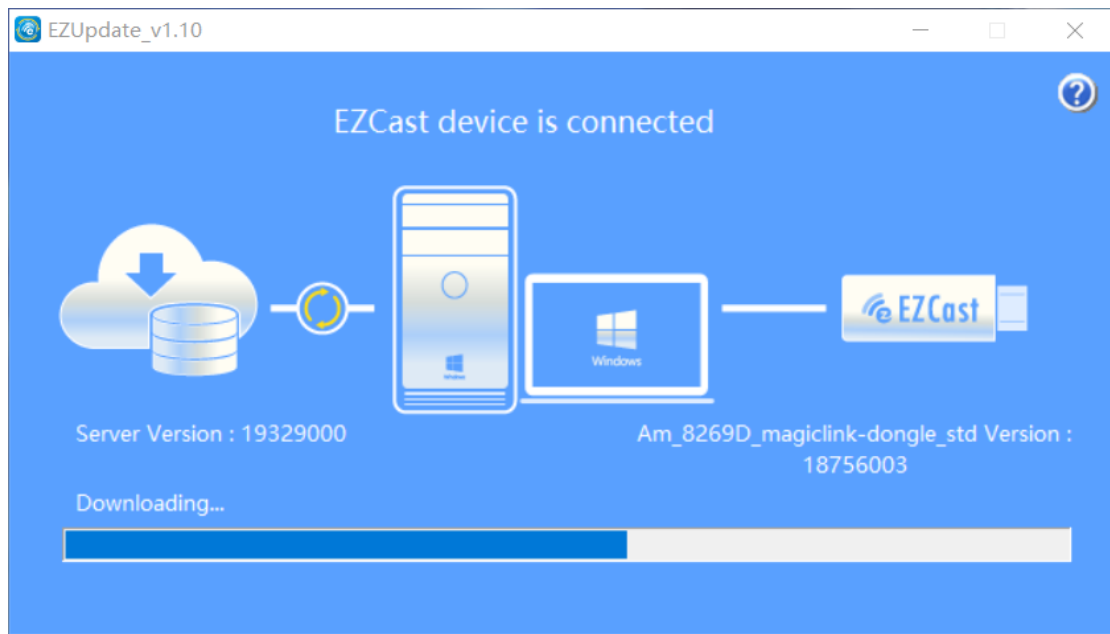

The FW is successfully updated when you see the following message.

